

**CURRENT
SPECIAL**

Order a flatbed before 4/15/26, and
get fenders with a custom fender add-on.



\$593 VALUE



FLATBED PRICE SHEET



Builder/Dealer:
Lake Anderson Steel
Saltcoats, SK





STEP 1: CHOOSE YOUR BED MODEL

1

Standard Model:
Starting at \$5,795
+ \$895 install



Shown: Standard Base Model + Toolboxes + Cargo Ears

2

Full Skirted Model:
Starting at \$9,425
+ \$895 install



Shown: Full Skirted Base Model + Bed Rails



Call to Order: [306-217-7082](tel:306-217-7082)



STEP 2: CHOOSE YOUR DECK TYPE

Wood Deck



Standard Model Prices	
SRW	\$5,795 + \$895 Install
Dually	\$6,095 + \$895 Install
Cab/Chassis	Call for pricing
Full Skirted Model Prices	
SRW	\$9,425 + \$895 Install
Dually	\$9,725 + \$895 Install
Cab/Chassis	Call for pricing

Trex Deck



Standard Model Prices	
SRW	\$5,850 + \$895 Install
Dually	\$6,225 + \$895 Install
Cab/Chassis	Call for pricing
Full Skirted Model Prices	
SRW	\$9,550 + \$895 Install
Dually	\$9,850 + \$895 Install
Cab/Chassis	Call for pricing

Steel Deck



Standard Model Prices	
SRW	\$6,645 + \$895 Install
Dually	\$6,945 + \$895 Install
Cab/Chassis	Call for pricing
Full Skirted Model Prices	
SRW	\$9,550 + \$895 Install
Dually	\$9,850 + \$895 Install
Cab/Chassis	Call for pricing



Call to Order: 306-217-7082



STEP 3: CHOOSE YOUR ADD-ONS



Underbody Toolboxes

\$1,995/pr - LB | \$1,250/pr - SB



Step Fender Add-on

\$395 - Longbed only



Octagon Fenders

\$395



Shortbed Toolbox Fender

\$395- Shortbed only



Call to Order: [306-217-7082](tel:306-217-7082)




STEP 3: CHOOSE YOUR ADD-ONS



Bed Rails
\$550



Cargo Ears
\$30 (Pair)

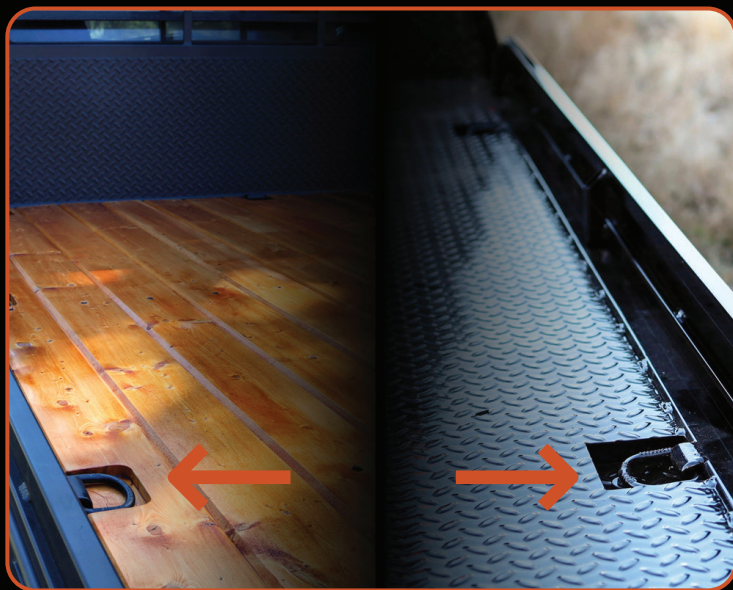

Inset D-Rings (Best Value)
\$25/ea.



Rub Rails
\$375



Call to Order: 306-217-7082




STEP 3: CHOOSE YOUR ADD-ONS



Gooseneck Ball Install (30K)

\$550. If you have an existing ball, we will use it for no additional charge.

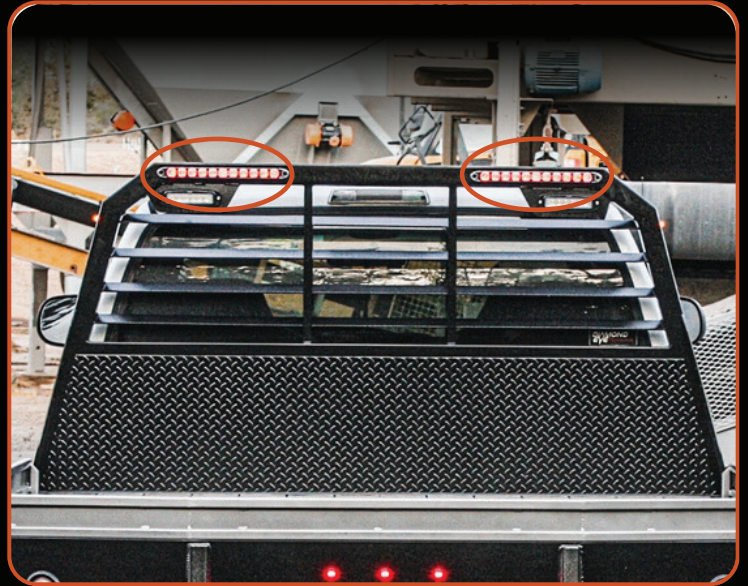

Headache Rack Stop/Turn/Tail

\$150



Need something custom?

Call us! We can make it happen!



Click to watch

The coolest flatbed video ever.

Click the play button to watch.

\$0 to watch the above awesome video.



Call to Order: 306-217-7082



STEP 4: CALCULATE TOTAL PRICE

Standard Model Only

Item	Price	Write in to Apply
Base Model Price (Choose on deck type page)	Varies	
Underbody Toolboxes (pair)	\$1,995 LB \$1,250 SB	
Any Fender Variation	\$395	
Bed Rails	\$550	
3 inch Cargo Ears	\$30	
Inset D-Rings	\$25 ea.	
Rub Rails	\$375	
Gooseneck Ball Install (30K)	\$550	
Headache Rack Stop/Turn Tail	\$150	
Backup Camera Install (factory camera reqd.)	\$50	
Parking Sensor Install (factory sensors reqd.)	\$150	
Class V Rear Reciever (Cab/Chassis only)	\$450	
	Total:	

Table 2: Apply any price deductions

Item	Price Deduction	Write in to Apply
Tacoma deduction off base price (Tacoma only)	-\$200	
Remove stock bed prior to install	-\$200	
No decking (wood/trex beds only)	-\$275	
No powdercoat (raw steel)	-\$1,000	
No Install (You install)	-\$695	
	Total Deductions:	

Total Price: total of table 1 - total deductions (table 2 total)	
---	--



Call to Order: [306-217-7082](tel:306-217-7082)

