



STEP 1: CHOOSE YOUR BED MODEL





STEP 2: CHOOSE YOUR DECK TYPE



| Standard Model Prices | | | |
|---------------------------|-------------------------|--|--|
| SRW | \$5,795 + \$895 Install | | |
| Dually | \$6,095 + \$895 Install | | |
| Cab/Chassis | Call for pricing | | |
| Full Skirted Model Prices | | | |
| SRW | \$9,425 + \$895 Install | | |
| Dually | \$9,725 + \$895 Install | | |
| Cab/Chassis | Call for pricing | | |



| Standard Model Prices | | | |
|---------------------------|-------------------------|--|--|
| SRW | \$5,850 + \$895 Install | | |
| Dually | \$6,225 + \$895 Install | | |
| Cab/Chassis | Call for pricing | | |
| Full Skirted Model Prices | | | |
| SRW | \$9,550 + \$895 Install | | |
| Dually | \$9,850 + \$895 Install | | |
| Cab/Chassis | Call for pricing | | |



| Standard Model Prices | | | |
|---------------------------|-------------------------|--|--|
| SRW | \$6,645 + \$895 Install | | |
| Dually | \$6,945 + \$895 Install | | |
| Cab/Chassis | Call for pricing | | |
| Full Skirted Model Prices | | | |
| SRW | \$9,550 + \$895 Install | | |
| Dually | \$9,850 + \$895 Install | | |
| Cab/Chassis | Call for pricing | | |



STEP 3: CHOOSE YOUR ADD-ONS



Underbody Toolboxes \$1,995/pr - LB | \$1,250/pr - SB



Step Fender Add-on \$395 - Longbed only



Octagon Fenders \$395



Shortbed Toolbox Fender \$395- Shortbed only




STEP 3: CHOOSE YOUR ADD-ONS



Bed Rails \$550



Cargo Ears \$30 (Pair)

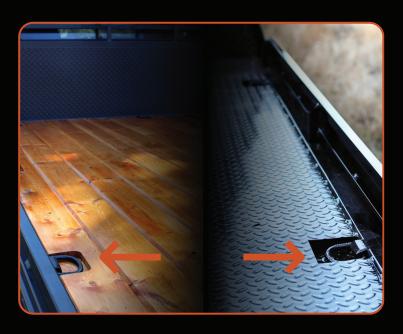

Inset D-Rings (Best Value) \$25/ea.




Rub Rails \$375



STEP 3: CHOOSE YOUR ADD-ONS



Gooseneck Ball Install (30K) \$550. If you have an existing ball, we will use it for no additional charge.

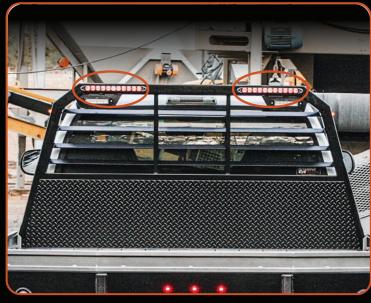

Headache Rack Stop/Turn/Tail \$150



Need something custom?

<u>Call us!</u> We can make it happen!



The coolest flatbed video ever.

<u>Click the play button</u> to watch.

\$0 to watch the above awesome video.







STEP 4: CALCULATE TOTAL PRICE

| Item | Price | Write in to Apply |
|---|-------------------------|-------------------|
| Base Model Price (Choose on deck type page) | Varies | |
| Underbody Toolboxes (pair) | \$1,995 LB \$1,250 SB | |
| Any Fender Variation | \$395 | |
| Bed Rails | \$550 | |
| 3 inch Cargo Ears | \$30 | |
| Inset D-Rings | \$25 ea. | |
| Rub Rails | \$375 | |
| Gooseneck Ball Install (30K) | \$550 | |
| Headache Rack Stop/Turn Tail | \$150 | |
| Backup Camera Install (factory camera reqd.) | \$50 | |
| Parking Sensor Install (factory sensors reqd.) | \$150 | |
| Class V Rear Reciever (Cab/Chassis only) | \$450 | |
| | Total: | |

Table 2: Apply any price deductions

| Item | Price Deduction | Write in to Apply |
|---|-------------------|-------------------|
| Tacoma deduction off base price (Tacoma only) | -\$200 | |
| Remove stock bed prior to install | -\$200 | |
| No decking (wood/trex beds only) | -\$275 | |
| No powdercoat (raw steel) | -\$1,000 | |
| No Install (You install) | -\$695 | |
| | Total Deductions: | |

